Cuspidor Installation *(Console Mounted)*

Parts Bag Contents
T-Fitting w/tubing 1
1/4" Barb Fitting 1

Special Tools
none

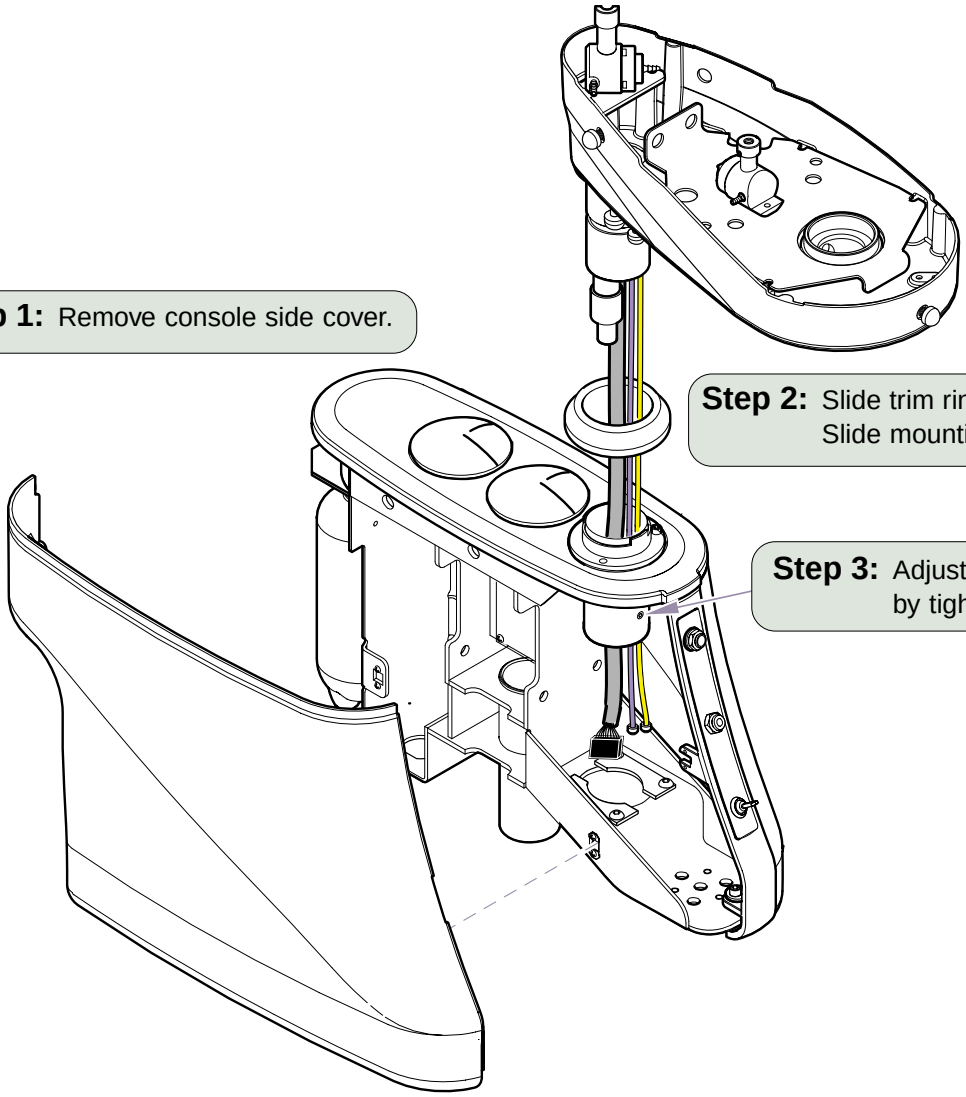

Step 1: Remove console side cover.

Step 2: Slide trim ring onto mounting post.
Slide mounting post into console bearing.

Step 3: Adjust "drag" *(tension when rotated)* by tightening/loosening set screw.

KA954401

Step 5: Install faucet and gasket.
Install bowl flush spout and gasket.
Install gold trap.

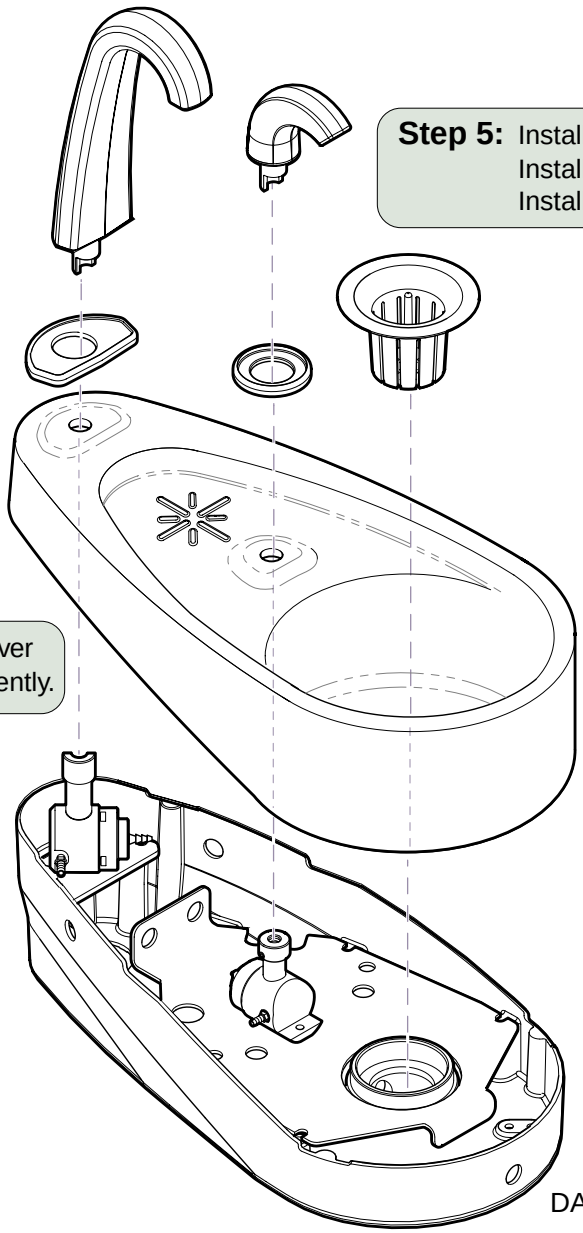

Step 4: Position cuspidor bowl over base then press down gently.

DA137300i

© Midmark Corporation 2003

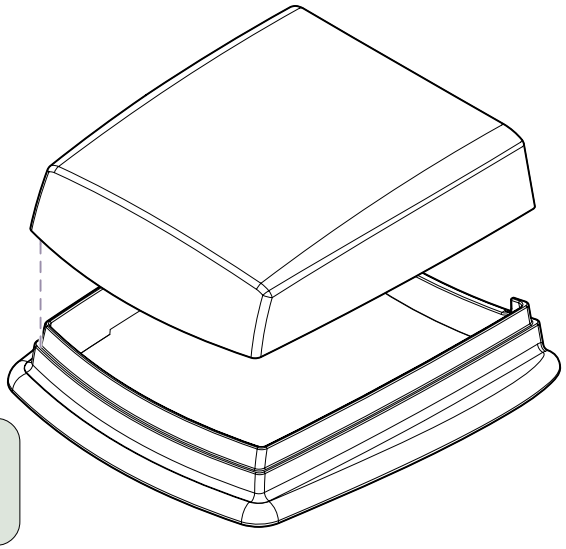

Step 6: Remove plug from water shut-off valve.
Install 1/4” barb fitting.
Connect 1/4” blue tubing from umbilical.

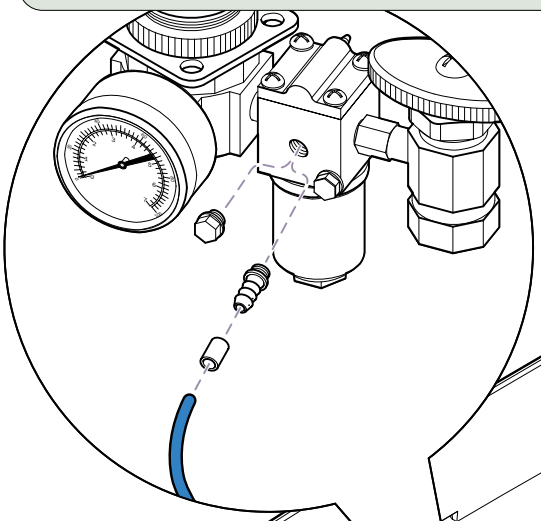

Step 7: Connect 5/8” **smooth** tubing from umbilical to facility drain.

Note: *5/8” **ribbed** tubing is for optional Assistant’s Unit.*

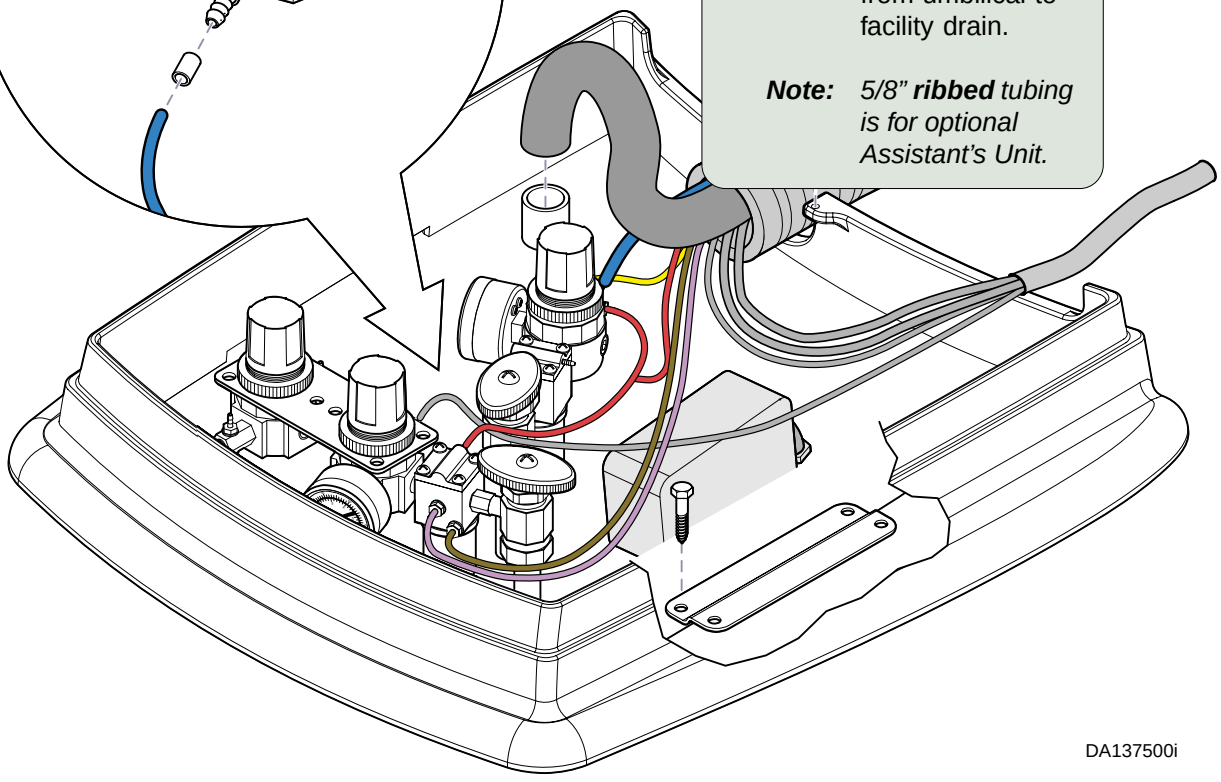

DA137500i

© Midmark Corporation 2003

© Midmark Corporation 2003

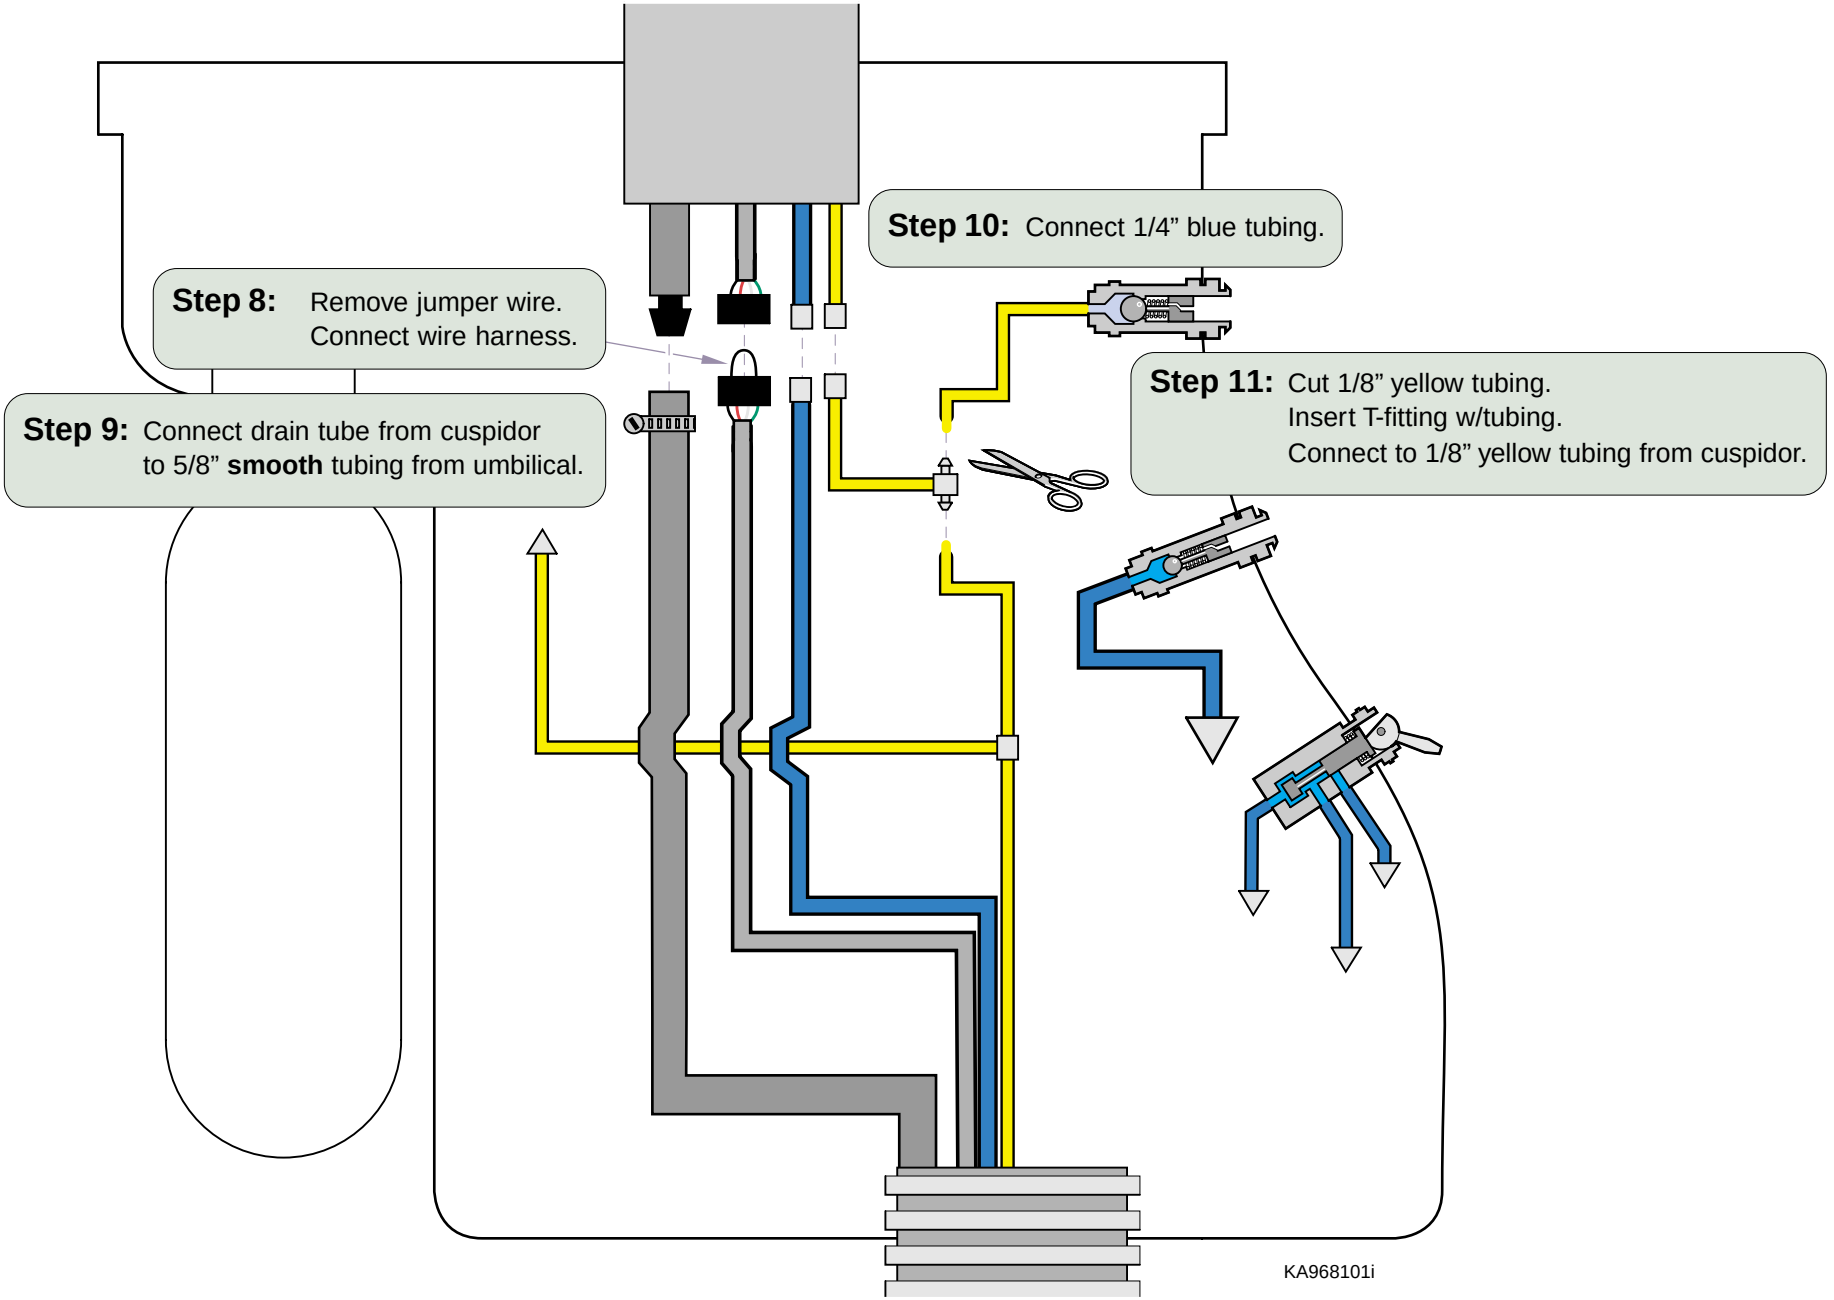
Step 8: Remove jumper wire.
Connect wire harness.
Step 9: Connect drain tube from cuspidor
to 5/8" **smooth** tubing from umbilical.
Step 10: Connect 1/4" blue tubing.
Step 11: Cut 1/8" yellow tubing.
Insert T-fitting w/tubing.
Connect to 1/8" yellow tubing from cuspidor.
KA968101i

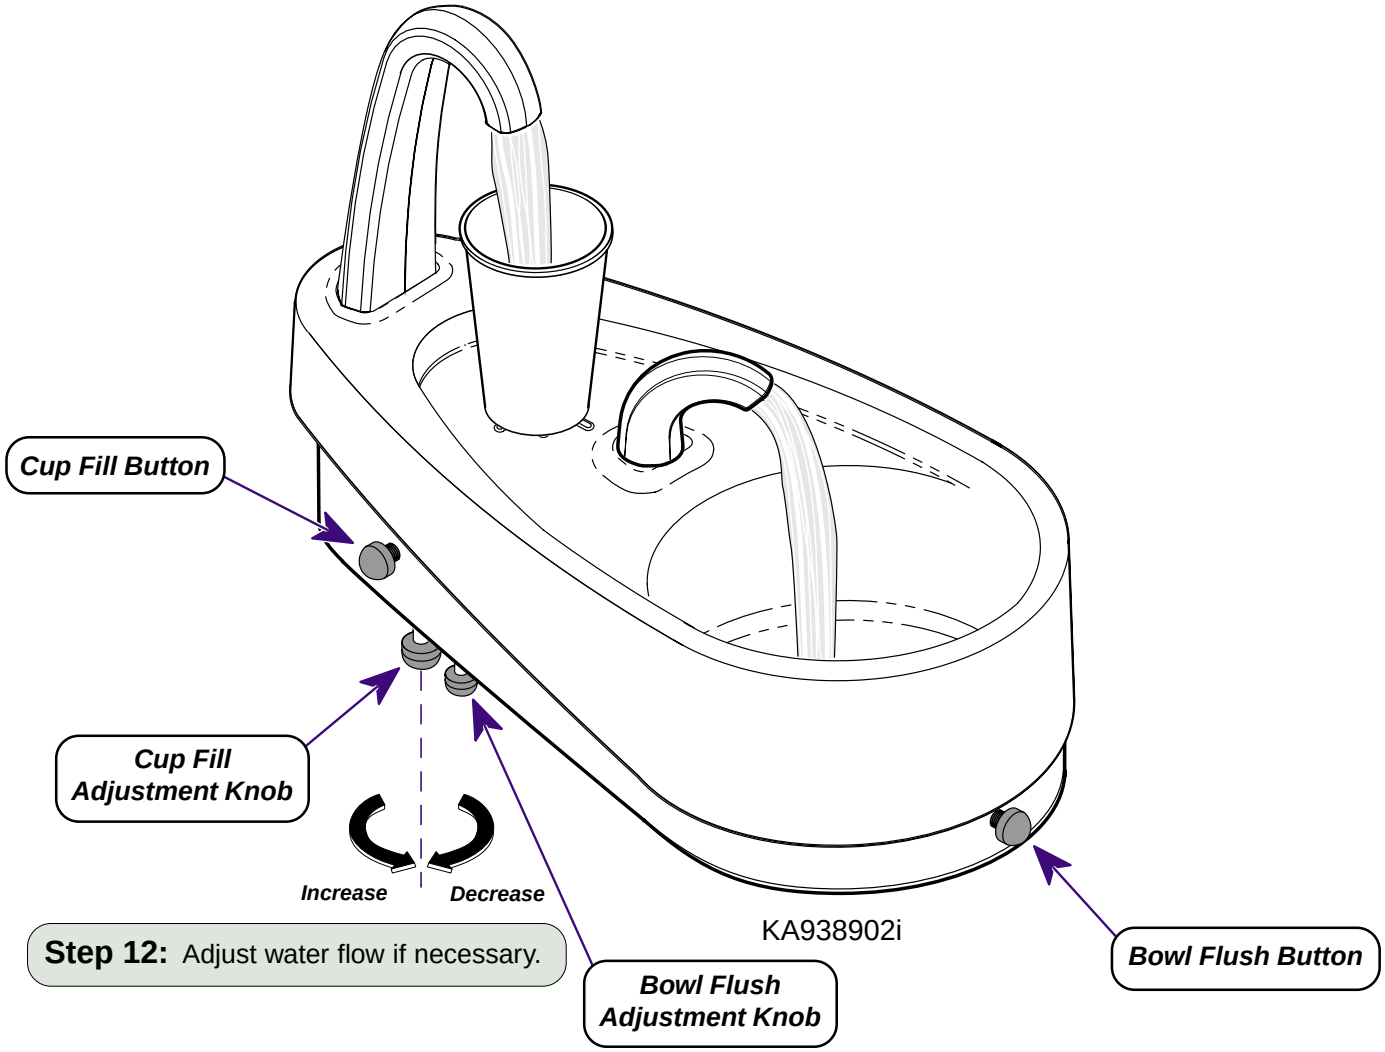

Step 12: Adjust water flow if necessary.

Midmark Corporation
60 Vista Drive
P.O. Box 286
Versailles, OH 45380-0286
937-526-3662
Fax 937-526-5542
www.midmark.com

Because we care.

© Midmark Corporation 2003